
SECTION 9C

HORNS

CAUTION: Disconnect the negative battery cable before removing or installing any electrical unit or when a tool or equipment could easily come in contact with exposed electrical terminals. Disconnecting this cable will help prevent personal injury and damage to the vehicle. The ignition must also be in LOCK unless otherwise noted.

TABLE OF CONTENTS

Specifications	9C-1	On-Vehicle Service	9C-3
Fastener Tightening Specifications	9C-1	Dual Horns	9C-3
Schematic and Routing Diagrams	9C-2	General Description and System	
Horn Wiring System	9C-2	Operation	9C-4
Maintenance and Repair	9C-3	Horns	9C-4


SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Application	N•m	Lb-Ft	Lb-In
Horn Bolt	22	16	–

SCHEMATIC AND ROUTING DIAGRAMS

HORN WIRING SYSTEM

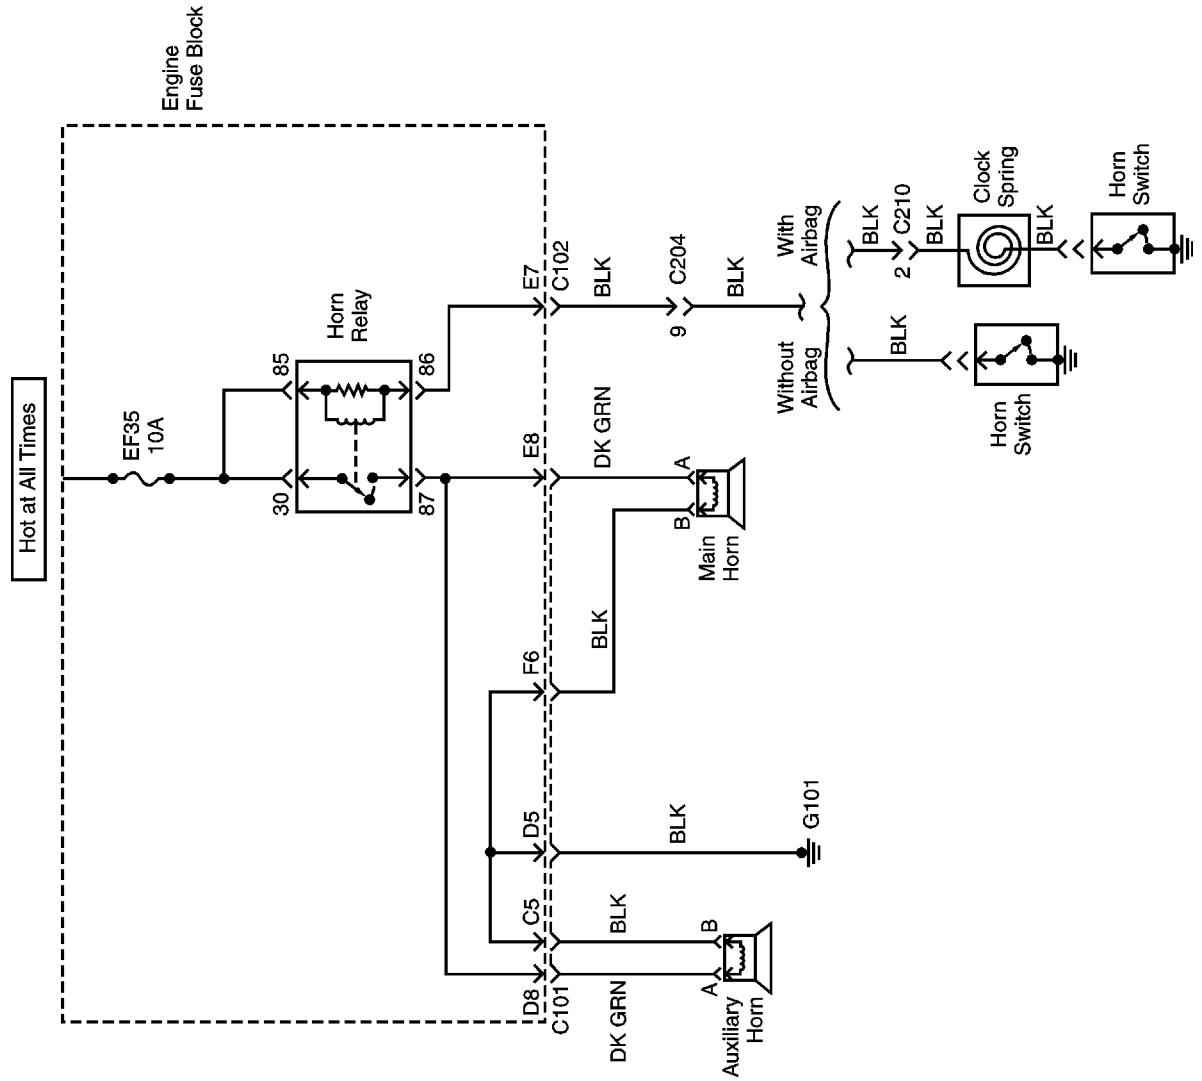

C309C001



MAINTENANCE AND REPAIR

ON-VEHICLE SERVICE

DUAL HORNS

Removal Procedure

1. Disconnect the negative battery cable.
2. Disconnect the electrical connector.
3. Remove the bolt and the horn (left side horn shown, right side horn located on the right side of the radiator).

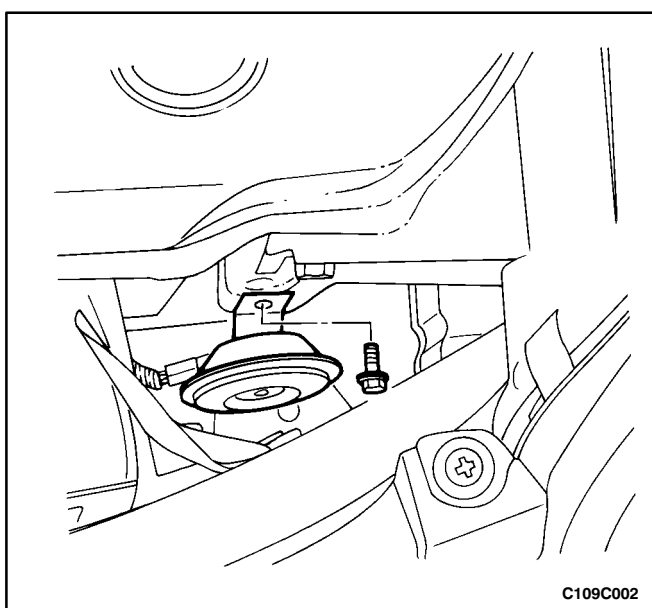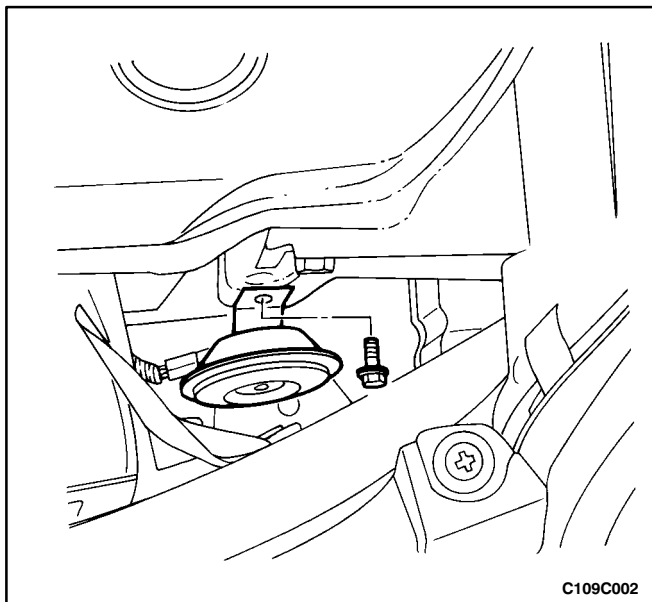

Installation Procedure

Notice: Dissimilar metals in direct contact with each other may corrode rapidly. Make sure to use the correct fasteners to prevent premature corrosion.

1. Install the horn with the bolt (left side horn shown, right side horn located on the right side of the radiator).

Tighten

Tighten the horn bolt to 22 N•m (16 lb-ft).

2. Connect the electrical connector.
3. Connect the negative battery cable.

GENERAL DESCRIPTION AND SYSTEM OPERATION

HORNS

The horns are located under the hood. They are attached near the radiator at the front of the vehicle. The horns are actuated by pressing the steering wheel pad, which grounds the horns' electrical circuit.