


SECTION 5

ELECTRICAL WIRING DIAGRAMS

5-2 ELECTRICAL WIRING DIAGRAMS

1. STARTING & CHARGING SYSTEM


1) BATTERY, IGNITION SWITCH, STARTER MOTOR, ALTERNATOR & SWITCH (CLUTCH(M/T), NSBU(A/T))

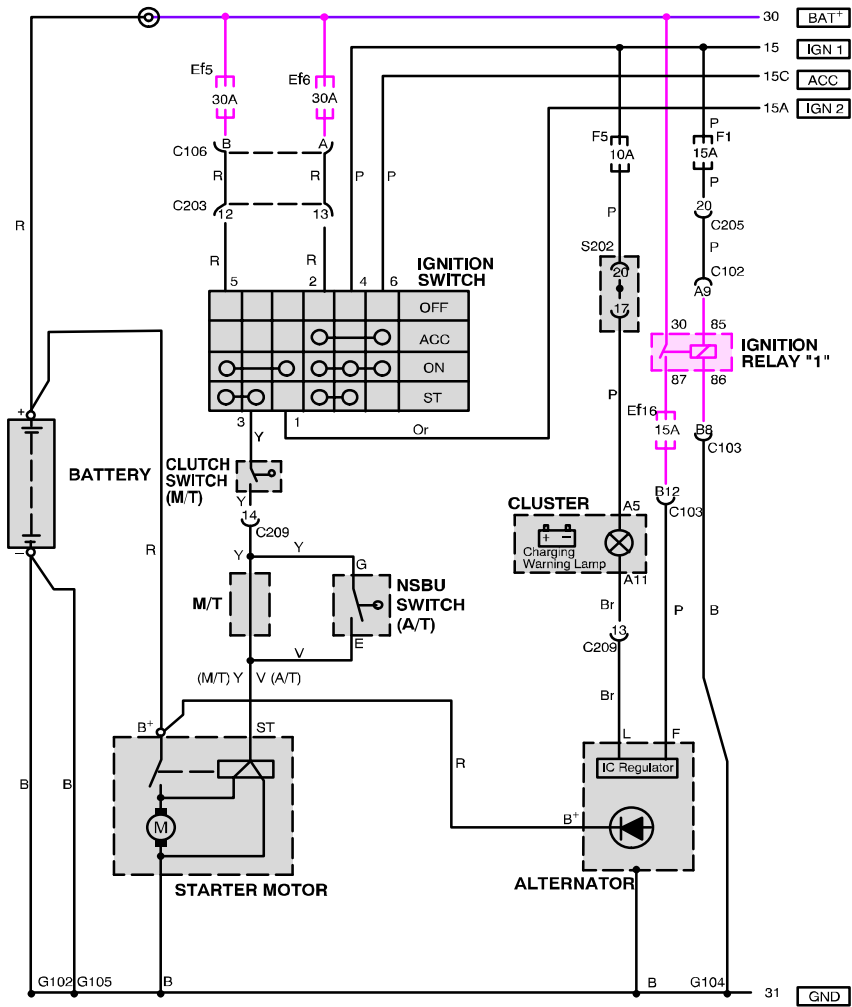

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102(68 Pin, Brown)	Engine Room Fuse Box – Body	Engine Room Fuse Box
C103(68Pin, Black)	Engine Room Fuse Box – Engine Control	Engine Room Fuse Box
C106(2 Pin, Colorless)	Engine Room Fuse Box – Body	Engine Room Fuse Box
C203(15 Pin, White)	I.P – Body	Left Driver Leg Room Connector Holder
C205(20 Pin, Colorless)	I.P – Body	Right Driver Leg Room Connector Holder
C209(20 Pin, Colorless)	I/P – Engine Control	Upper Co–driver Right Kick Panel
S202(Blue)	IP	Upper Driver Leg Room
G102	Battery & ABS	Between Battery and Fuse Box
G104	Engine Control	Cylinder Head Next to #4 Intake Manifold
G105	Battery	Next to Starter Motor

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

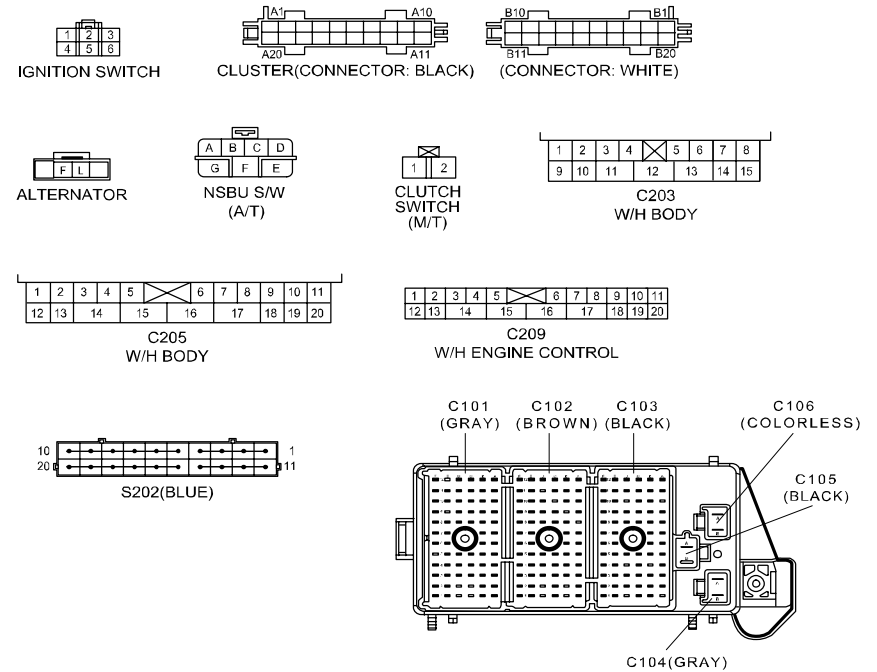


c. POSITION OF CONNECTORS AND GROUNDS


- ENGINE ROOM FUSE BLOCK

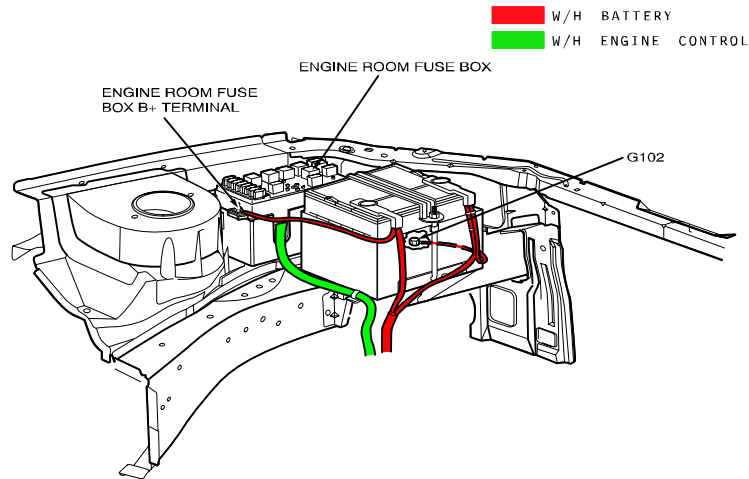

- LEFT "A" PILLAR INSIDE

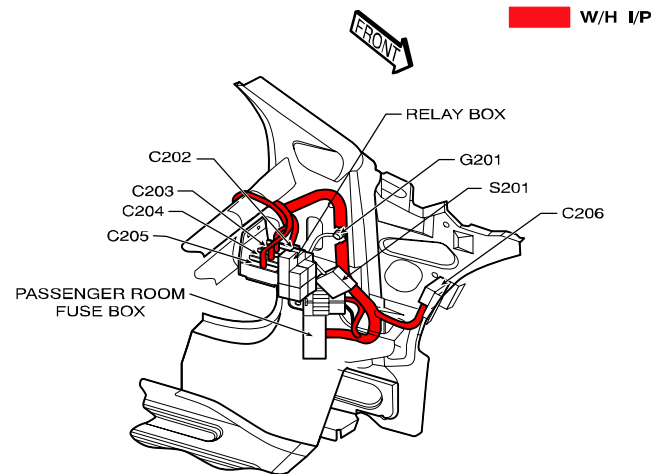

- 2.0 DOHC ENGINE

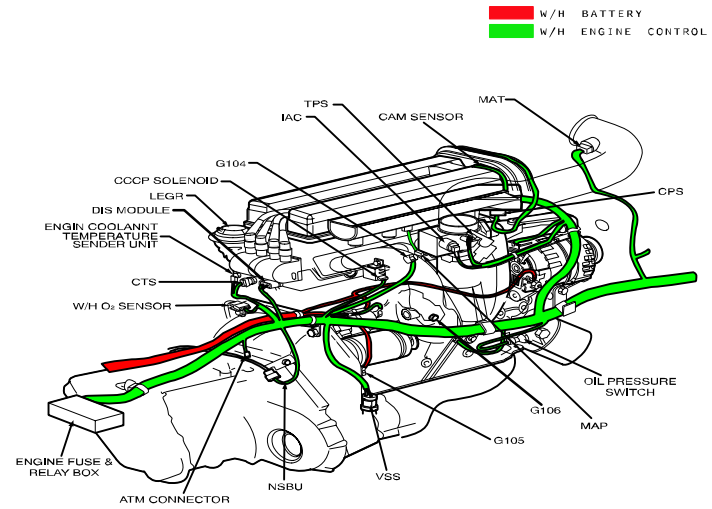

d. SPLICE PACK

S202 (BLUE)

