

SECTION : 9M

EXTERIOR TRIM




TABLE OF CONTENTS

SPECIFICATIONS 9M-1 FASTENER TIGHTENING SPECIFICATIONS . 9M-1 MAINTENANCE AND REPAIR 9M-2 ON-VEHICLE SERVICE 9M-2 B-PILLAR MOLDING 9M-2 QUARTER WINDOW MOLDING (WAGON) ... 9M-2	ROOF MOLDING 9M-3 MUD GUARDS 9M-4 GENERAL DESCRIPTION AND SYSTEM OPERATION 9M-5 EMBLEMS AND LETTERING 9M-5 MUD GUARDS 9M-5
--	---

SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Application	N•m	Lb-Ft	Lb-In
B-Pillar Molding Screws	4	–	35
Mud Guard Bolts	1.5	–	13
Quarter Window Molding Screws	4	–	35

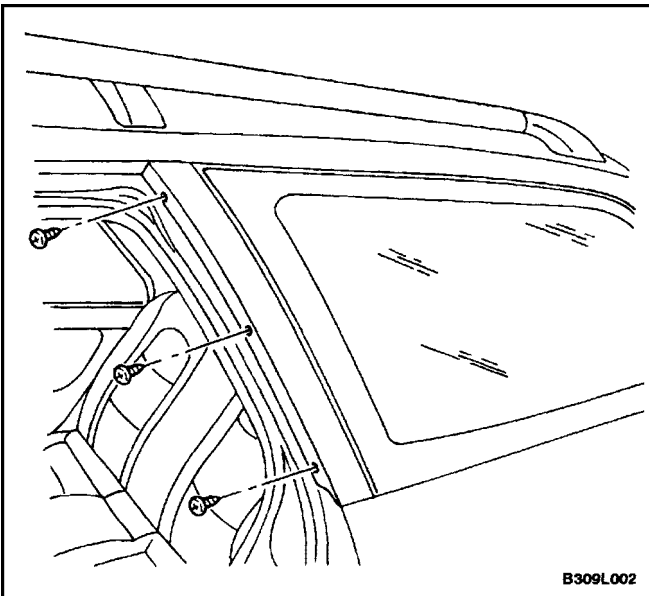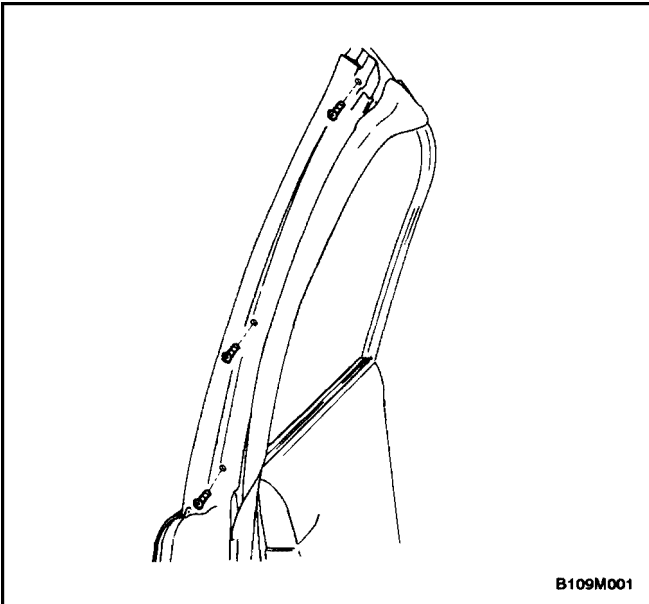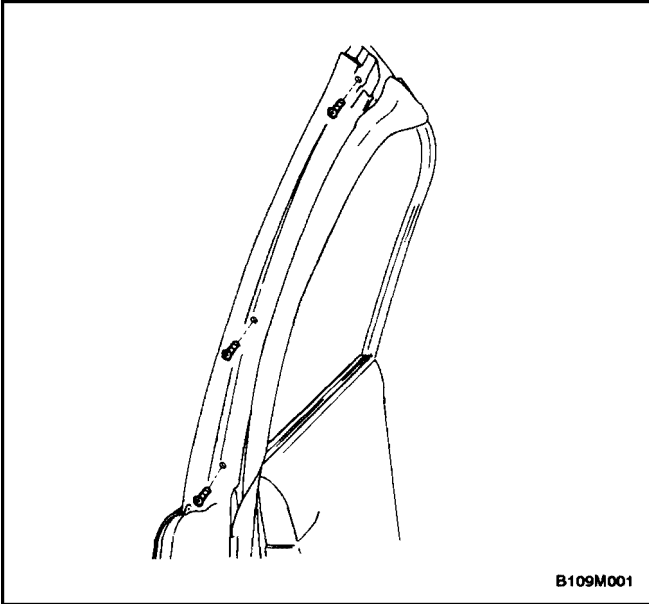

MAINTENANCE AND REPAIR

ON-VEHICLE SERVICE

B-PILLAR MOLDING

Removal Procedure

1. Reposition the weatherstrip in order to access the screws.
2. Remove the screws and the B-pillar molding.

Installation Procedure

Notice : Dissimilar metals in direct contact with each other may corrode rapidly. Make sure to use the correct fasteners to prevent premature corrosion.

1. Install the screws and the B-pillar molding.

Tighten


Tighten the B-pillar molding screws to 4 N•m (35 lbin).

2. Install the weatherstrip to its original position.

QUARTER WINDOW MOLDING (WAGON)

Removal Procedure

1. Open the rear passenger door.
2. Remove the screws and the quarter window molding.

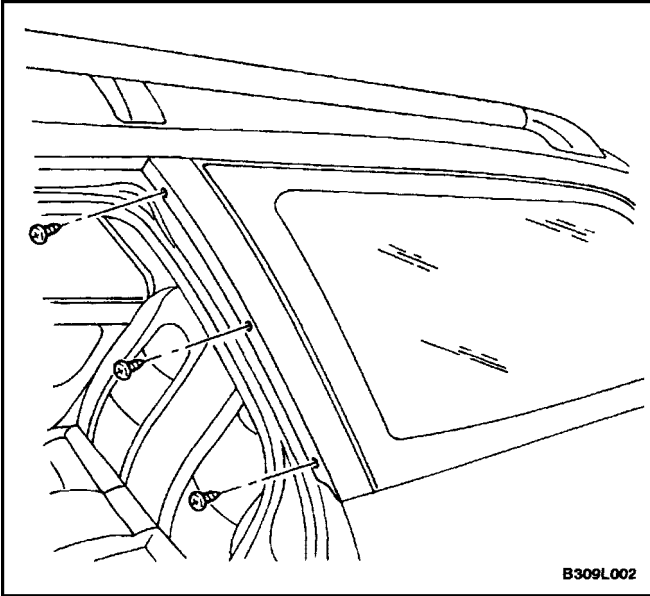


Installation Procedure

1. Install the quarter window molding with the screws.

Tighten

Tighten the quarter window molding screws to 4 N•m (35 lb-in).


2. Close the rear passenger door.

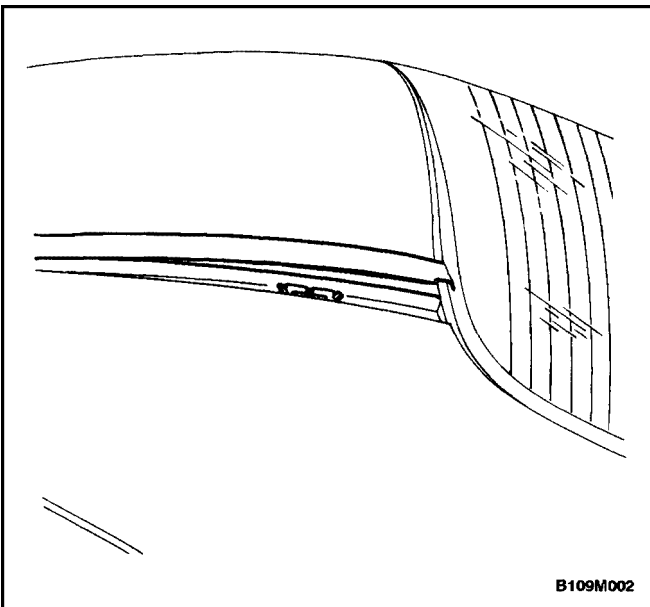

ROOF MOLDING


Removal Procedure

1. Remove the roof molding from the metal clips.

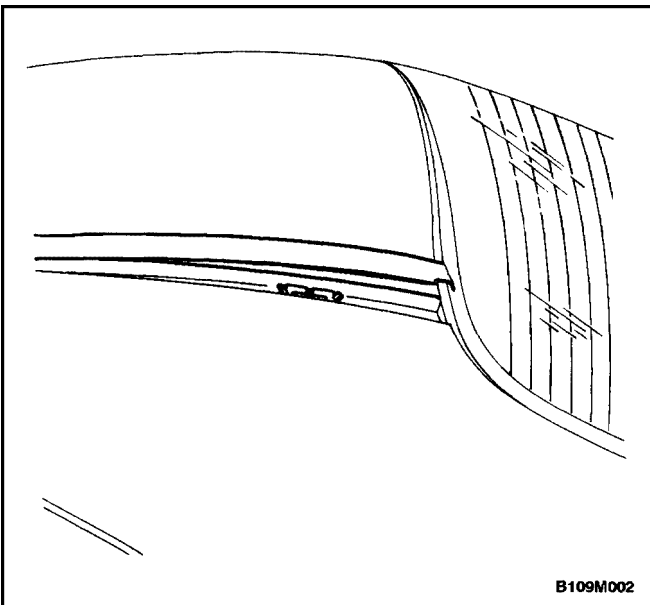

Installation Procedure


1. Press the roof molding onto the clips.

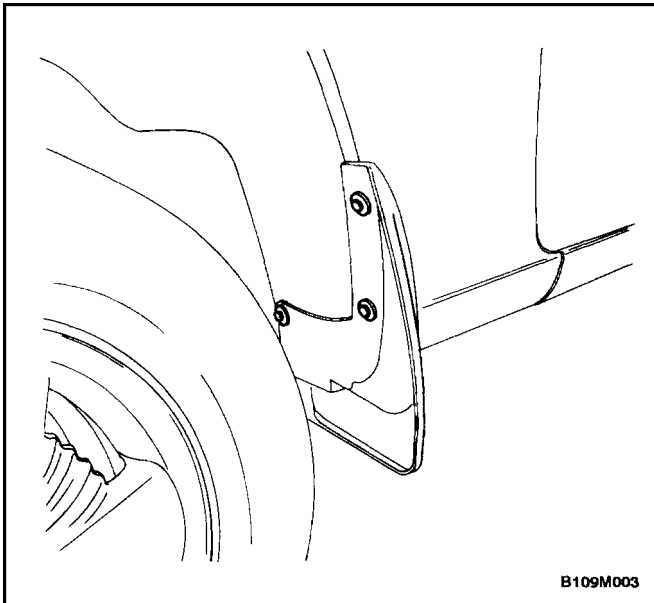

MUD GUARDS

Removal Procedure

1. Remove the bolts and the mud guard.

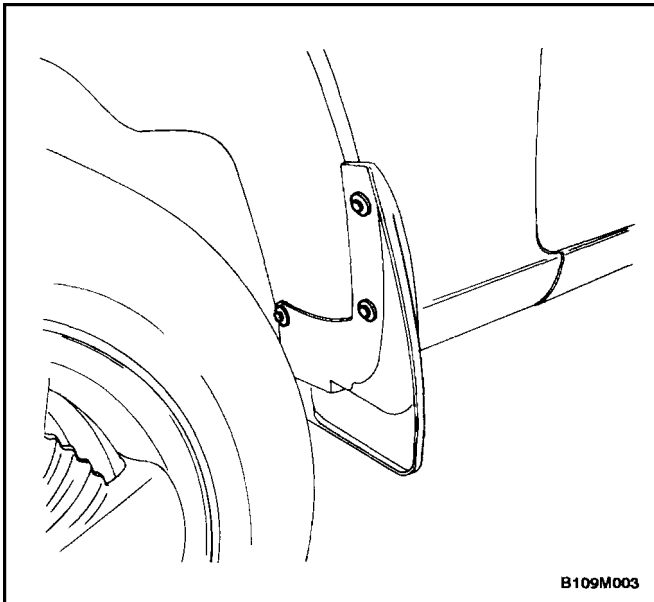

Installation Procedure

Notice : Dissimilar metals in direct contact with each other may corrode rapidly. Make sure to use the correct fasteners to prevent premature corrosion.

1. Install the mud guard with the bolts.

Tighten

Tighten the mud guard bolts to 1.5 N•m (13 lb-in).

GENERAL DESCRIPTION AND SYSTEM OPERATION

EMBLEMS AND LETTERING

The emblems and lettering on the vehicle are attached by adhesive. The company emblem appears on the hood. The lettering, which appears in several places on the body of the vehicle, features the model, the grade, and the company name.

MUD GUARDS

Front and rear mud guards are standard equipment on all models. Mud guards will help prevent an excessive build-up of mud on the body.